


3M™ 9914 Valved Dust Respirator with Nuisance Odour Protection



1. The noseclip is located in the top panel. Pre-form the noseclip by gently bending at the centre of the panel. Hold the respirator in one hand and pull out the bottom panel to form a cup.

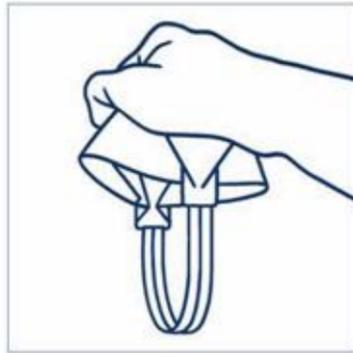

2. Turn respirator over to expose headbands.



3. Cup respirator under chin. Ensure the two straps are separated and pull the straps over the head, one at a time.



4. Locate the lower strap below the ears and the upper strap across the crown of the head. Adjust top and bottom panels for a comfortable fit.



5. Using both hands, mould noseclip to the lower part of the nose.



6. To check fit, cup both hands over the respirator and inhale sharply. If air flows around the nose, re-mould the nosepiece.

Note - do not use with beards or other facial hair that may prevent contact between the face and edge of the respirator.

If you cannot achieve a proper fit do not re-enter the contaminated area. See your supervisor.



3M™ 9914 Valved Dust Respirator with Nuisance Odour Protection



3M 9914 Valved Dust Respirator with Nuisance Odour Protection

Standard: EN149: 2001

Type: FFP1

Maximum Use Concentrations:

4 x WEL* for Particulates

Nuisance odour = below WEL*

*Workplace Exposure Limit

This respirator should not be used in oxygen deficient environments, for escape purposes or by people with beards/ facial hair or in atmospheres where concentrations of contaminant may exceed that deemed Immediately Dangerous to Life and Health (IDLH)